
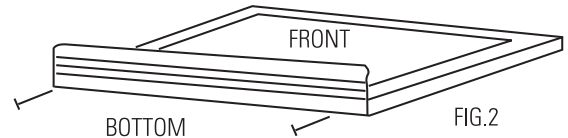


# Tray Mounting Instructions

1. Orient tray bottom of board with tray facing forward.(fig.1)
2. Make sure alignment of holes in tray match holes in board. Loosely attach outside screws to hold tray in position.(fig.2)
3. Attach remaining screws.
4. Tighten all screws.

Note: Number of screws and holes vary depending on board size. See below for the number of screws for your board

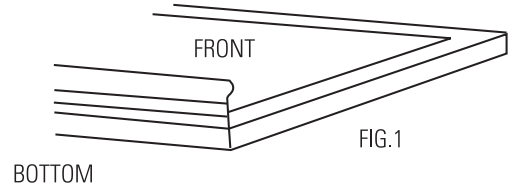

<p>60 cm 45 cm =  x2</p>	<p>90 cm 60 cm =  x3</p>	<p>120 cm 90 cm =  x4</p>
<p>180 cm 120 cm =  x4</p>	<p>240 cm 120 cm =  x6</p>	

380199